

# INSPECTION HATCH



Installation Instructions, models: PTL | PTL S | PTLMS

The inspection hatch can be installed indoors, either in wall or ceiling structures. The patented quick installation system is suitable for board structures with a thickness of 1–26 mm. Alternatively, the panel can also be fastened to the wall framing.



## QUICK INSTALLATION TO BOARD STRUCTURES (1–26 MM)

1. Mark the location of the access panel and carefully check the diagonal measurements. Cut the opening to the correct size.
2. Place the inspection hatch in position with the cover open. Note the weight of the cover, especially in ceiling installations – support the cover to prevent uncontrolled opening. Ensure that the frame fits tightly against the board surface.
3. Turn the quick fasteners behind the board using, for example, a screwdriver. The fasteners tighten progressively the more they are turned. We recommend using all fasteners.
4. Finally, close the cover and ensure that the frame fits tightly against the board surface.

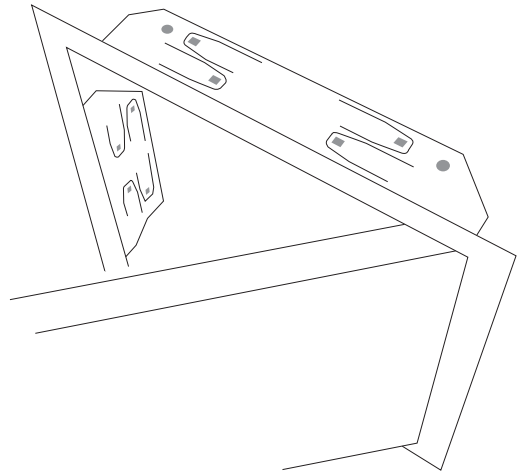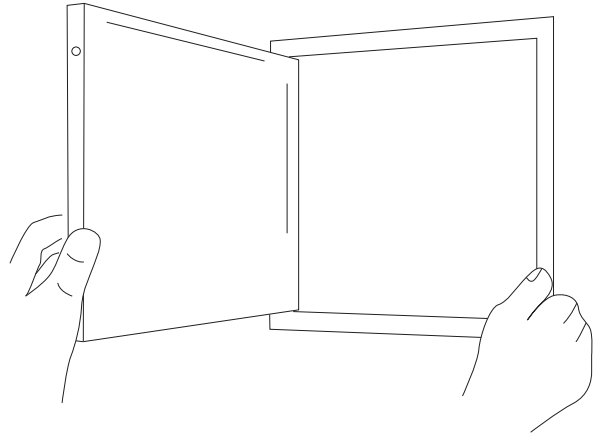

## SCREW / NAIL FASTENING

Attach the panel through all mounting holes (Ø 6.0 mm) using suitable nails or screws.

- For metal or wood framing: screws min. 4.5×35 mm
- For concrete block walls: nails min. 2.9×65 mm

## DIMENSIONS

- Opening size = nominal panel size
- Outer frame dimension = nominal size + 25 mm
- Frame depth = 42 mm from board surface

